


**Installation Recommendations**

1. Apply waterproof membrane over roof deck.
2. Install LowSlope™ Base Panel over membrane; attach 1-1/2" up from ex. fascia corner with approved fasteners at 16" O.C.
3. Install Heater Cables. Inspect, test, and correct if necessary.
4. Install LowSlope Panel Cover. Ensure full contact with Cover panel to extrusion for proper heat conductivity. Inadequate contact will result in poor performance. Attach with approved fasteners 16" O.C.
5. Apply 12" wide waterproof membrane strip across top edge of Cover Panel: cover cover fasteners but do not allow membrane to be exposed after metal roofing is installed.
6. Install composition roofing per roofing manufacturer.
5. Consult Summit Ice Melt Systems for special details and refer to Summit's Installation and Operation Guide. Per NEC, protect all circuits with GFCI Ground Fault protection.

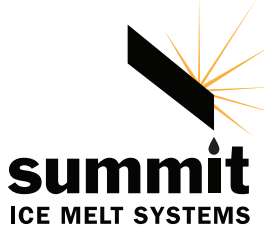

**Summit Ice Melt Systems, Inc.**  
*Thermodynamics analyzed. Applied.™*

2911 Lake Forest Road - P.O. Box 6928  
 Tahoe City, CA 96145-6928  
 Ph: 530-583-8888 - Fax: 530-583-7777

Scale Do Not Scale	Date 2/12/2018	Title LowSlope™ New Composition Shingle Roofing
Dimensions shown are for reference only.		Drawing Number 410