


Installation Recommendations

1. Apply waterproof membrane over roof deck
2. Install LowSlope™ Base Panel over membrane; attach 1-1/2" up from ex. fascia corner with approved fasteners at 24" O.C.
3. Install Heater Cables. Inspect and test, make corrections if necessary.
4. Install LowSlope Panel Cover, attach with approved fasteners 24" O.C.
5. Counterflash Panel Cover and fasteners by continuing waterproof membrane or, at minimum, apply 12" continuous strip to counterflash and waterproof fasteners and Panel Cover.
6. Install metal roofing per metal roofing manufacturer.
5. Consult Summit Ice Melt Systems for special details and refer to Summit's Installation and Operation Guide. Per NEC, protect all circuits with GFCI Ground Fault protection.

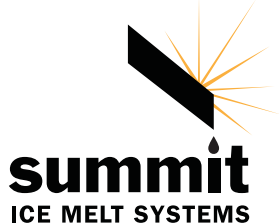

Summit Ice Melt Systems, Inc.
Thermodynamics analyzed. Applied.™

2911 Lake Forest Road - P.O. Box 6928
 Tahoe City, CA 96145-6928
 Ph: 530-583-8888 - Fax: 530-583-7777

Scale
 Do Not
 Scale

Date
 11-7-13

Title
 LowSlope New
 Metal Roofing
 Extended Drip

Dimensions shown are
 for reference only.

Drawing Number
 437