


Condensed Installation Recommendations

1. Notch slots into Base Panel and over Panel to accommodate roofing ribs.
2. Install Base Panel onto metal roofing with approved adhesive (Vulkem 931 or equal one-part, polyurethane sealant meeting ASTM C920 and TT-S-00230C standards).
3. Install Heater Cables. Inspect heater cables and test at junction box; correct if necessary.
4. Install LowSlope Cover Panel using adhesive.
5. Apply sealants around panel as required.
6. Consult Summit Ice Melt Systems for special details and refer to Summit's Installation and Operation Guide. Per NEC, protect all circuits with GFCI Ground Fault protection.

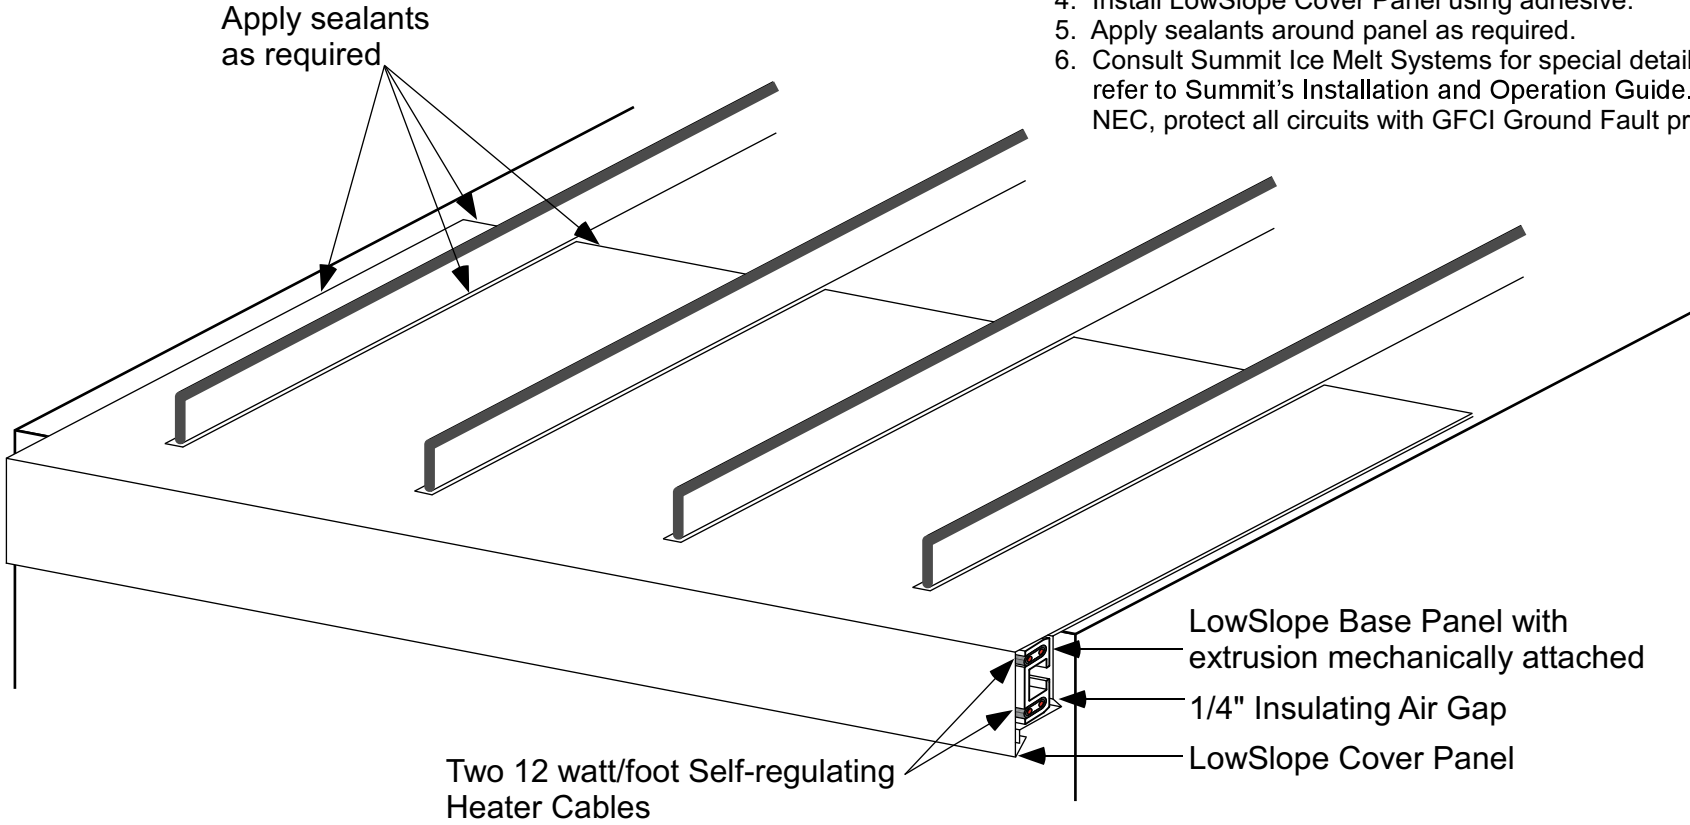

 <p>summit ICE MELT SYSTEMS</p>	<p>Summit Ice Melt Systems, Inc. <i>Thermodynamics analyzed. Applied.™</i></p> <p>2911 Lake Forest Road - P.O. Box 6928 Tahoe City, CA 96145-6928 Ph: 530-583-8888 - Fax: 530-583-7777</p>	Scale Do Not Scale	Date 10-28-15	Title LowSlope™ Onto Existing Metal Roofing
		Dimensions shown are for reference only.		Drawing Number 445