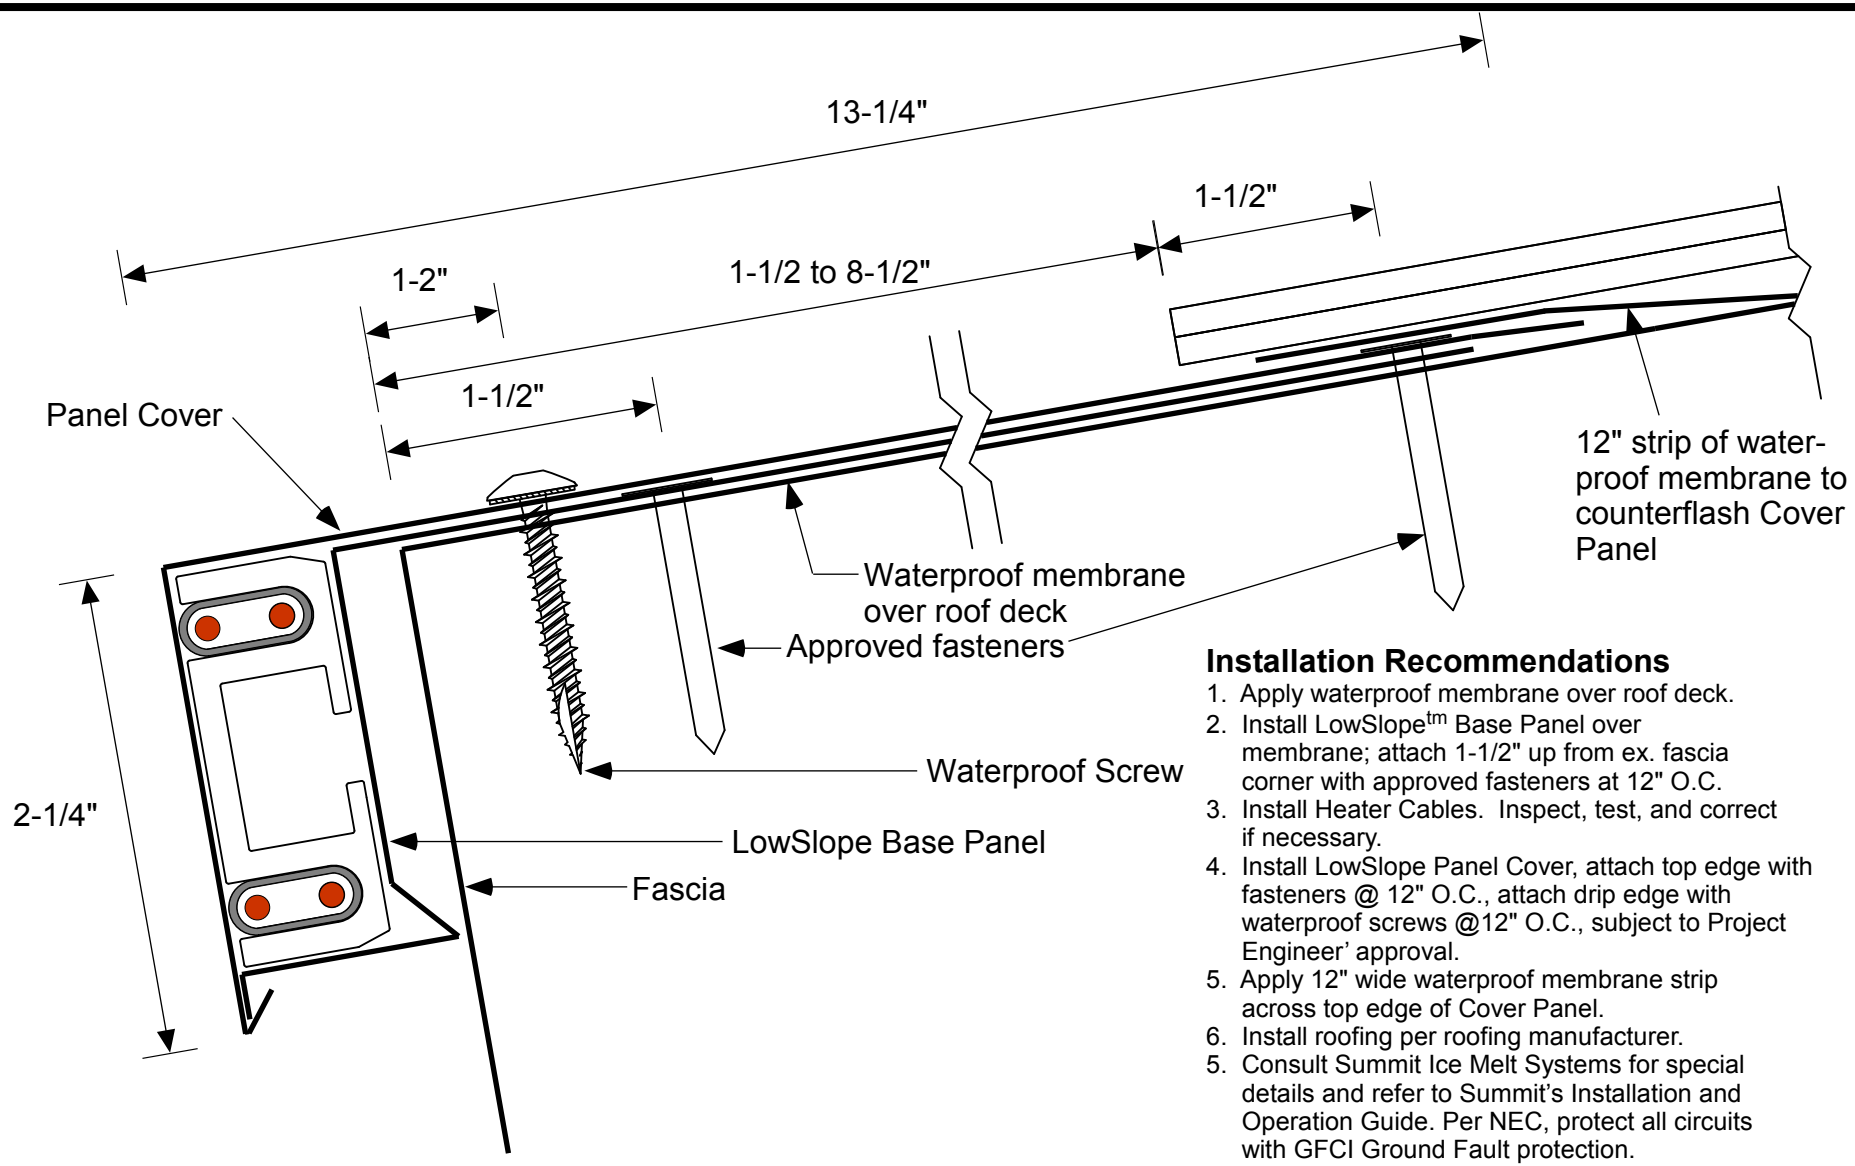

Installation Recommendations

1. Apply waterproof membrane over roof deck.
2. Install LowSlope[tm] Base Panel over membrane; attach 1-1/2" up from ex. fascia corner with approved fasteners at 12" O.C.
3. Install Heater Cables. Inspect, test, and correct if necessary.
4. Install LowSlope Panel Cover, attach top edge with fasteners @ 12" O.C., attach drip edge with waterproof screws @12" O.C., subject to Project Engineer' approval.
5. Apply 12" wide waterproof membrane strip across top edge of Cover Panel.
6. Install roofing per roofing manufacturer.
5. Consult Summit Ice Melt Systems for special details and refer to Summit's Installation and Operation Guide. Per NEC, protect all circuits with GFCI Ground Fault protection.

summit
ICE MELT SYSTEMS

Summit Ice Melt Systems, Inc.

Thermodynamics analyzed. Applied.™

2911 Lake Forest Road - P.O. Box 6928
Tahoe City, CA 96145-6928
Ph: 530-583-8888 - Fax: 530-583-7777

Scale	Date	Title
Do Not Scale	12-12-2013	LowSlope New Roofing High Wind Area
Dimensions shown are for reference only.		Drawing Number 410